


### BEGIN HERE

These are all the parts you need to put together your Power Zoid. Start with battery insertion (requires 1 "AA" Alkaline battery, not included) and wheel assembly. Study the pictures carefully.

Next, proceed with assembling the cockpit (step 3). All Power Zoids parts snap together and do not require glue.

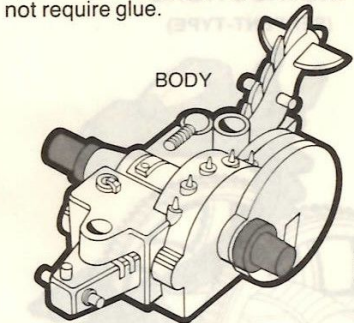

BODY


TIRES



WHEELS



COCKPIT



(UPPER)

(LOWER)




CANOPY




PILOT

LABEL SHEET

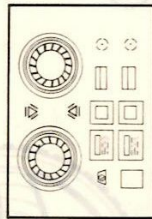

ACCESSORIES

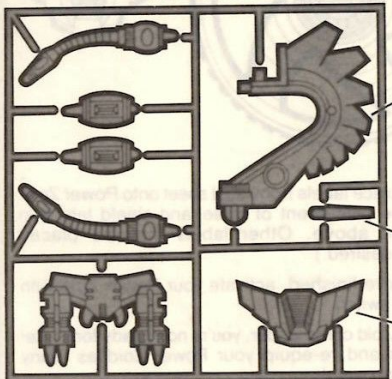

SERPENT NECK


STANDING PEG

SHIELD

1


### BATTERY INSERTION

Battery compartment is located underneath the main body where it says, "OPEN."

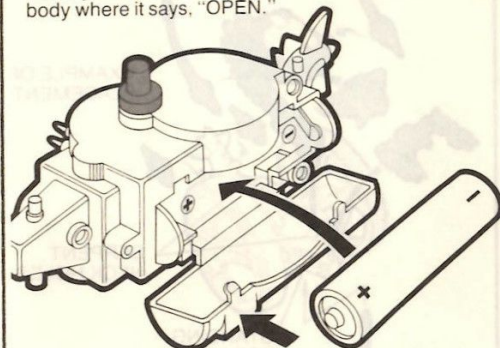

PUSH TO OPEN  
BATTERY COVER

ON/OFF SWITCH


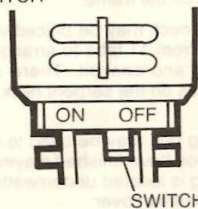


BACK OF  
BATTERY COVER

SWITCH


2

### WHEEL ASSEMBLY

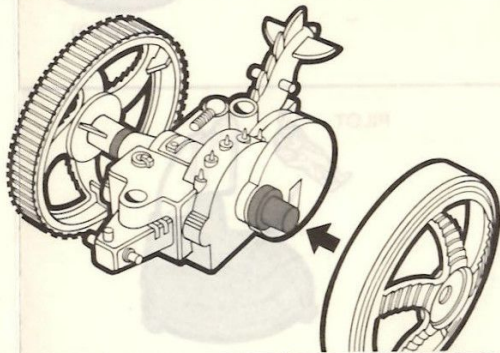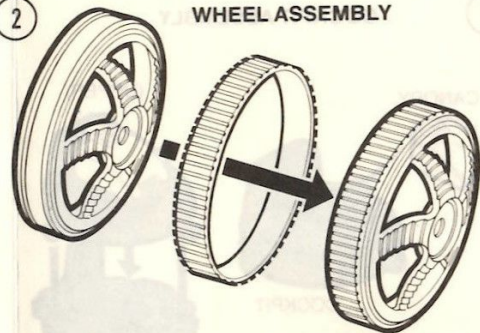

3

## COCKPIT ASSEMBLY

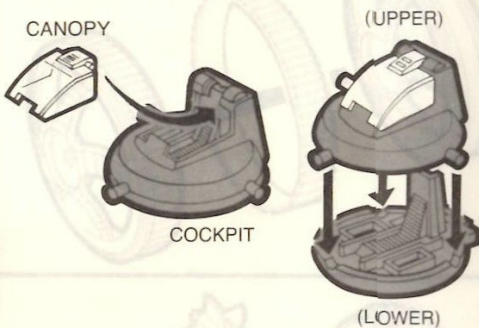


PILOT



4

## ACCESSORIES

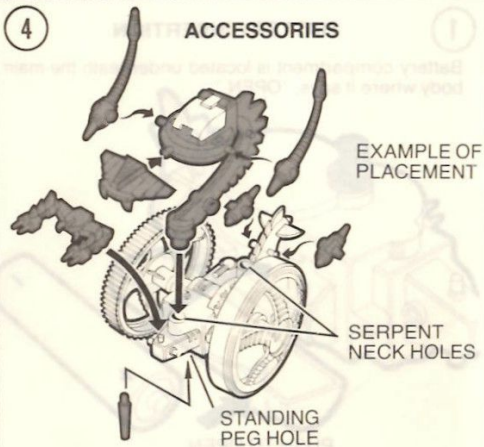


Now it's time to equip and design your Power Zoid. Using your safety scissors (not included) cut the accessories off the frame.

The serpent neck may be placed in 1 of 2 holes. You can choose from 11 tabs to arrange your Power Zoid accessories and cockpit. There are 3 tabs on the cockpit, 3 tabs on the serpent neck, and 5 tabs on the main body.

The standing peg may be used to model your Power Zoid when you have finished playing. The hole for the standing peg is located underneath the main body, in front of the battery cover.

5

## LABEL APPLICATION

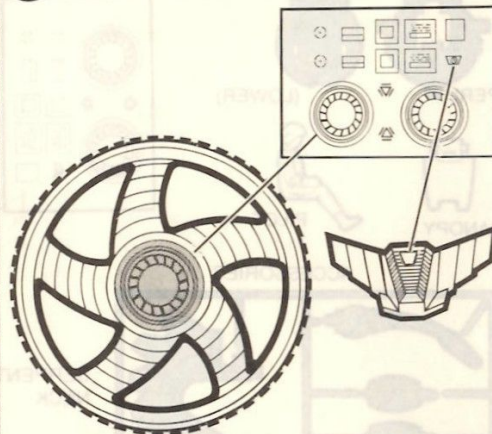


Peel and place labels from label sheet onto Power Zoid. (Note: See placement of wheel and shield labels in illustration above. Other labels may be placed wherever desired.)

When you've finished, activate your Power Zoid with the on/off switch.

As Power Zoid commander, you're now ready for battle! Re-design and re-equip your Power Zoid as many times as you wish!

# POWER ZOIDS®

## INSTRUCTIONS (SERPENT-TYPE)

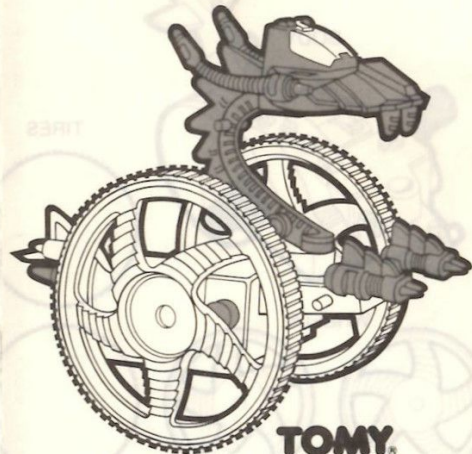
**TOMY.**

© 1983 Tomy Corp., 901 E. 233rd St., P.O. Box 6252, Carson, CA 90749